


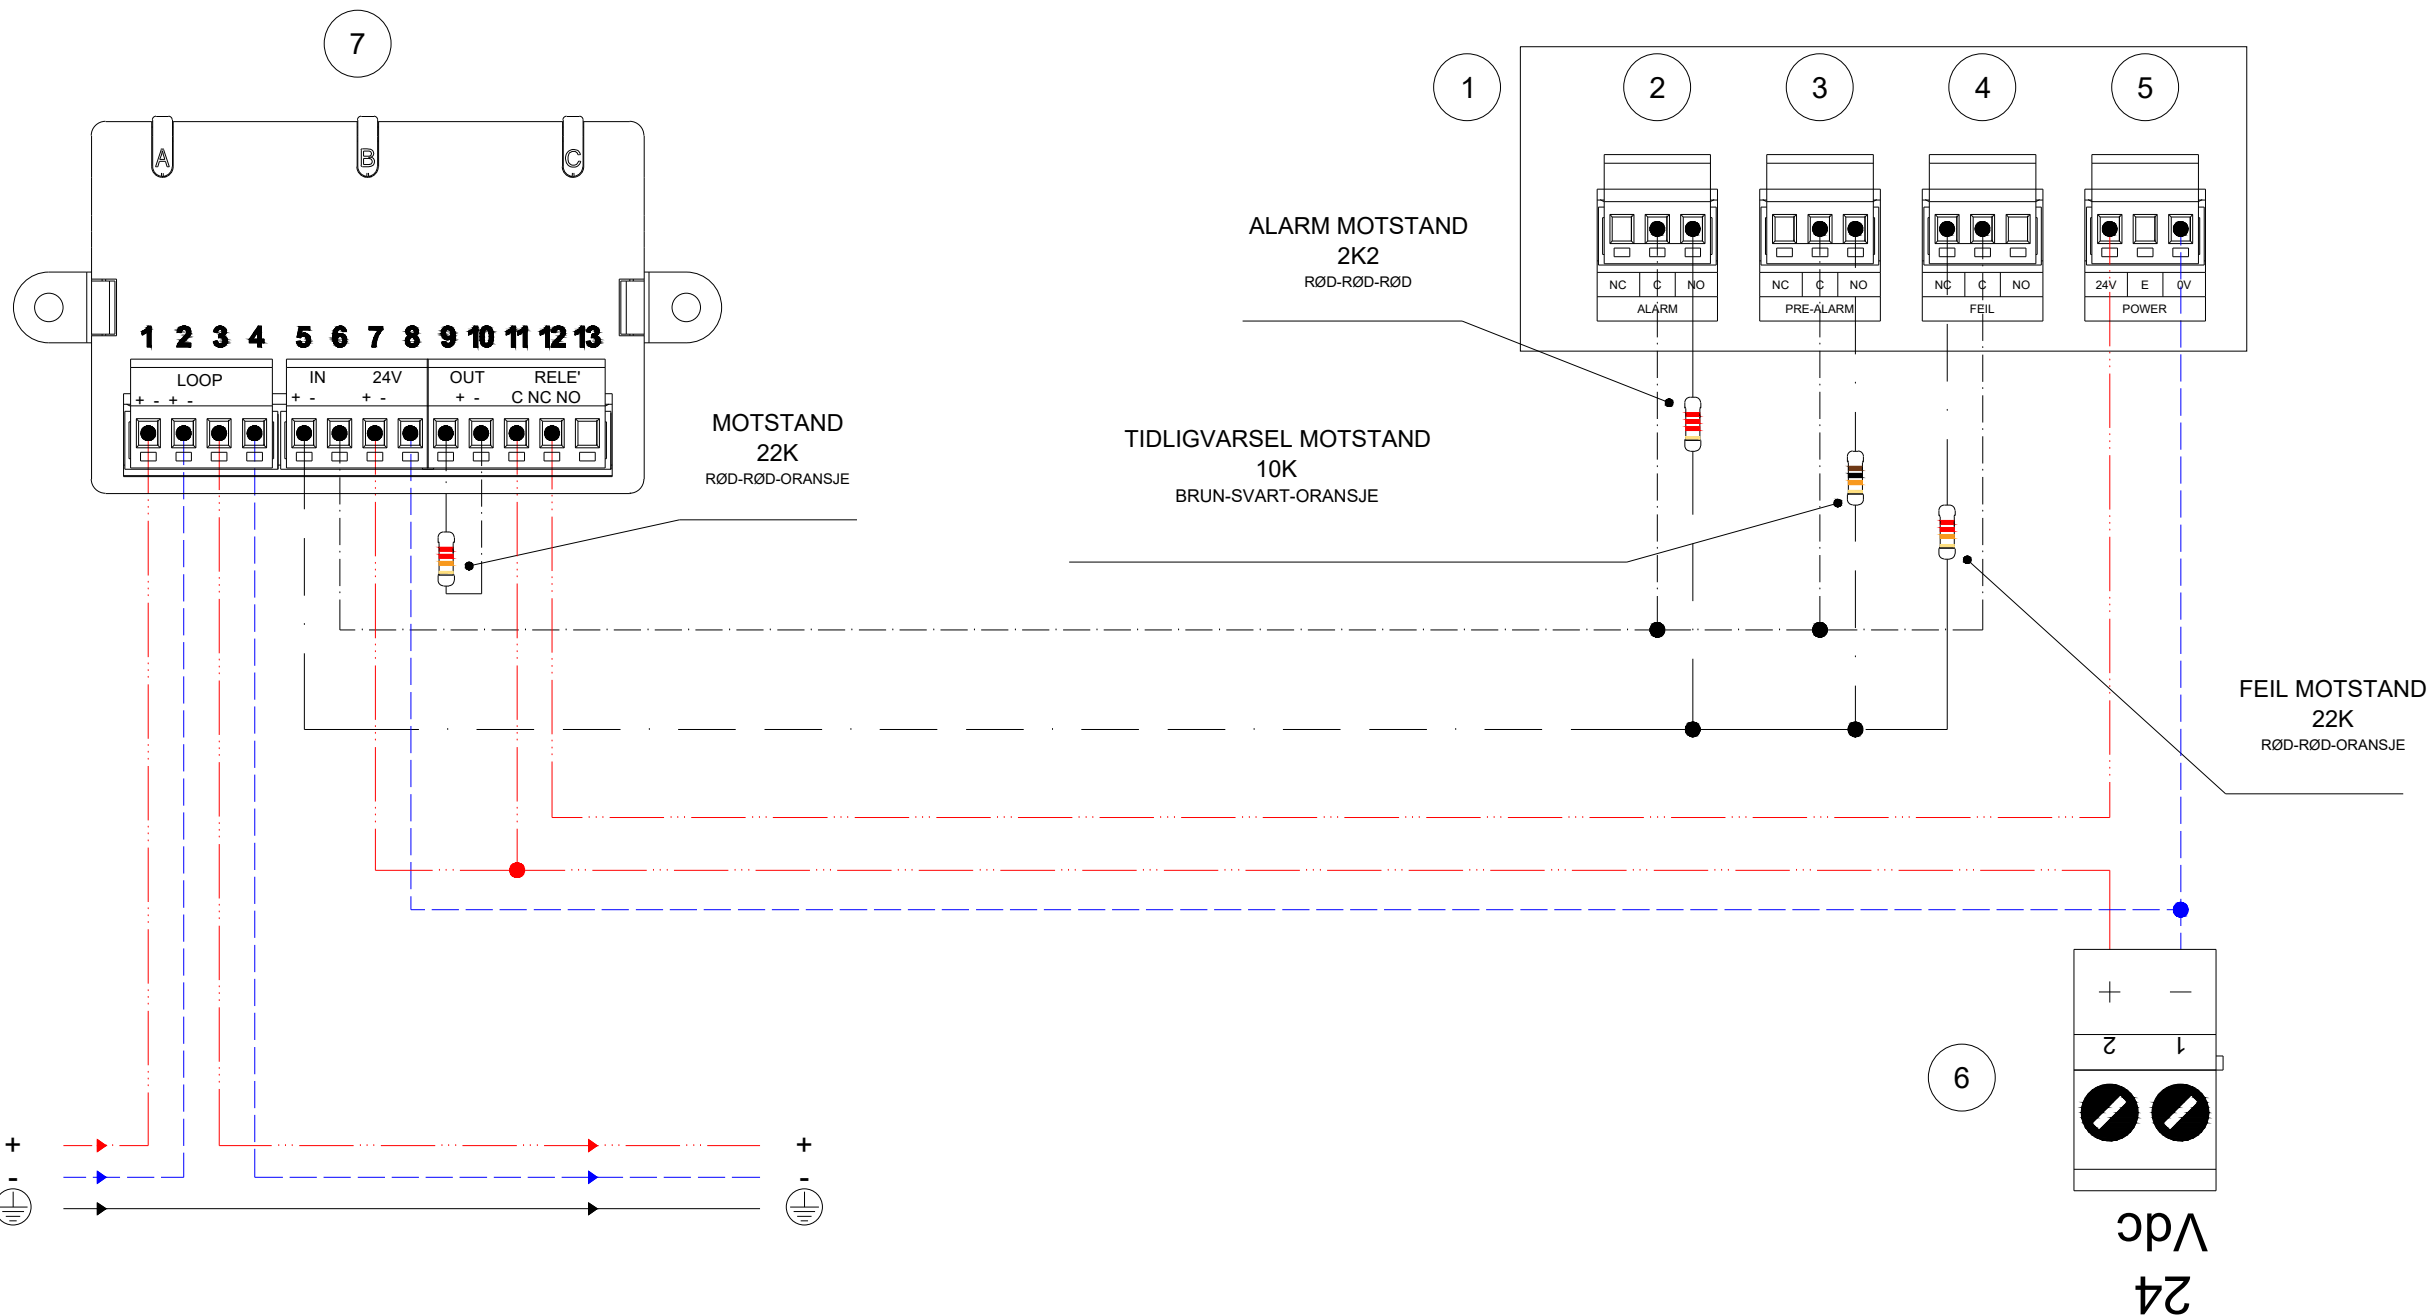

- BESKRIVELSE:
- 1. TERMINAL BLOCK
 - 2. ALARM RELÉ (LUKKET=ALARM)
 - 3. PRE-ALARM RELÉ (LUKKET=PRE-ALARM)
 - 4. FEIL RELÉ (ÅPEN=FEIL)
 - 5. TERMINAL FOR EKSTERN SPENNINGSFORSYNING
 - 6. SPS24X60G SPENNINGSFORSYNING
 - 7. EM312SR I/O-MODUL

SYMBOL	BESKRIVELSE
Nortek SECURITY & TECHNOLOGY Strandveien 2F 3050 Mjøndalen Tlf: +47 31 41 51 40 www.nortek.st	
EM312SR INNGANG	
Christopher Teigstad	Utgave 1 Ark 1/1